




BACK GLASS
G-408-21

WHEN ORDERING PART, SPECIFY PART NO. AND NAME OF GAME

FREEDOM

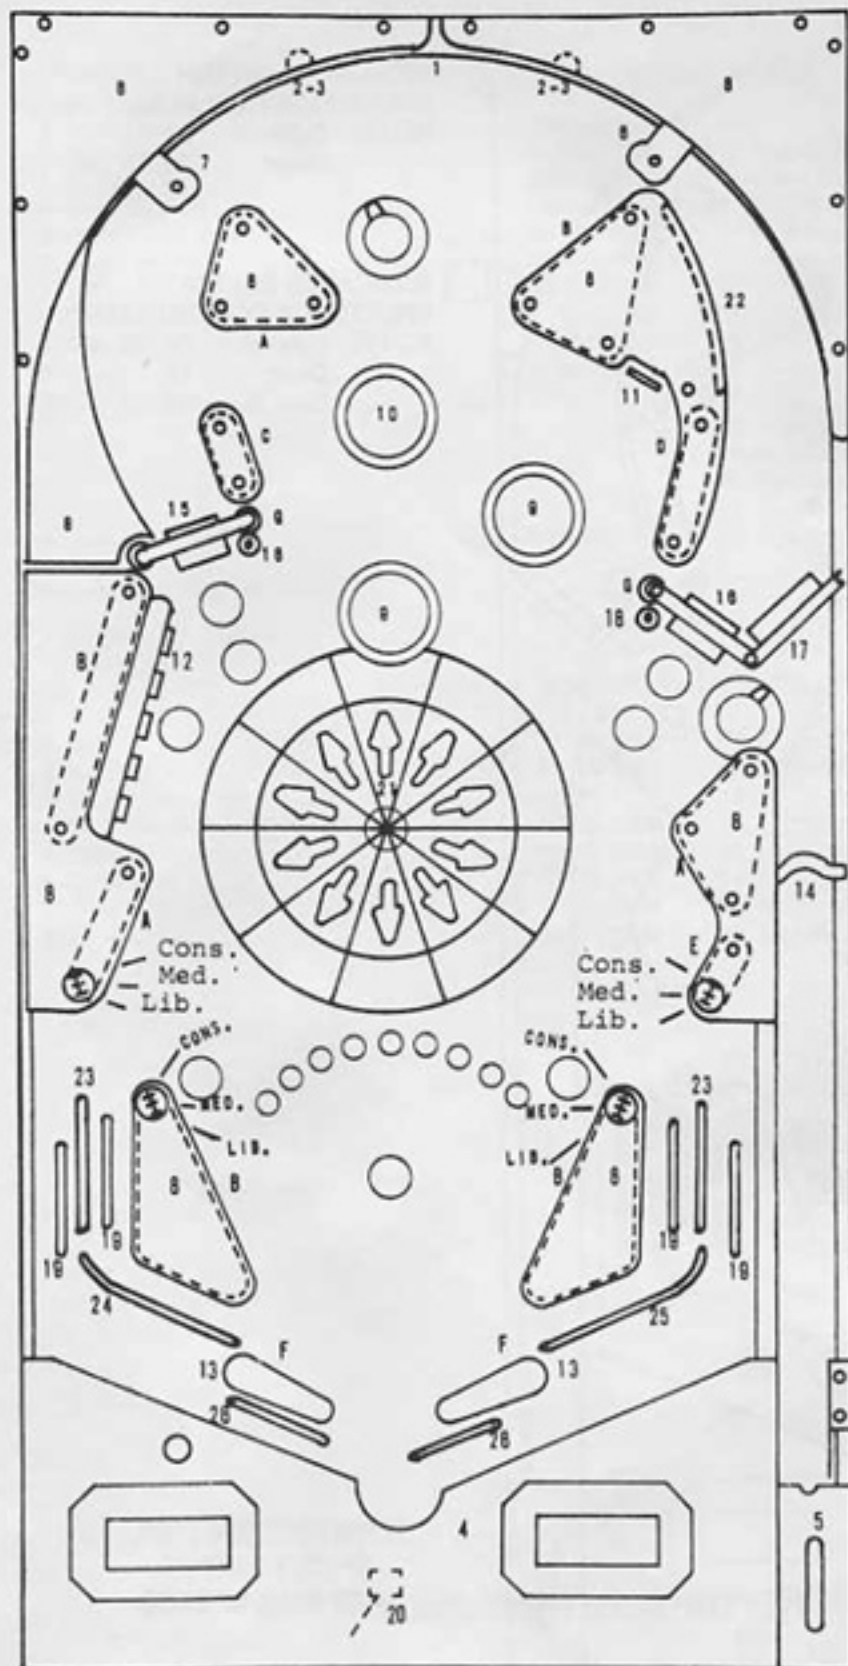

RUBBER PARTS

Dimensions are inside diameters. Numbers in parentheses indicate quantity used, if in excess of one.

A. R-521-3	2" Dia.	(3)
B. R-521-5	3" Dia.	(5)
C. R-521-1	1" Dia.	(1)
D. R-521-2	1-1/2" Dia.	(1)
E. R-521	3/4" Dia.	(1)
F. R-408-3	Flipper	(2)
G. R-243	5/16" Dia.	(5)

PANEL TOP PARTS

1. Arch Rail	M-1774
2. Rail Post	C-907
3. Rail Post Cap	C-908
4. Bottom Arch	P-5871-55
5. Shooter Guide	P-6359-21
6. Ball Gate (R)	A-1475-9
7. Ball Gate (L)	A-1475-10
8. Screened Plastics	A-2890-127
9. Thumper Cap (2)	A-3713-27
10. Thumper Cap	A-3713-28
11. Target Assem. (Red)	AS-982-723
12. Drop Target Unit	AS-2795-51
13. Flipper & Shaft (2)	AS-2214-24
14. Lane Hood	P-1732
15. Spinner Gate (L)	AS-2250-41
16. Spinner Gate (R)	AS-2250-42
17. Ball Gate	AS-2250-24
18. Minipost Assem. (2)	AS-2836
19. Rollover Wire (4)	AS-2806
20. Outhole Wire	AS-2806-21
21. Rollover Button	C-900
22. Ball Guide	M-121-16
23. Ball Guide (2)	M-121-18
24. Ball Guide	M-121-43
25. Ball Guide	M-121-44
26. Ball Guide	M-121-53


CONS. — Conservative

MED. — Medium

LIB. — Liberal

Indicates movable posts for scoring adjustments.

**WHEN ORDERING PART,
SPECIFY PART NO.
AND NAME OF GAME**

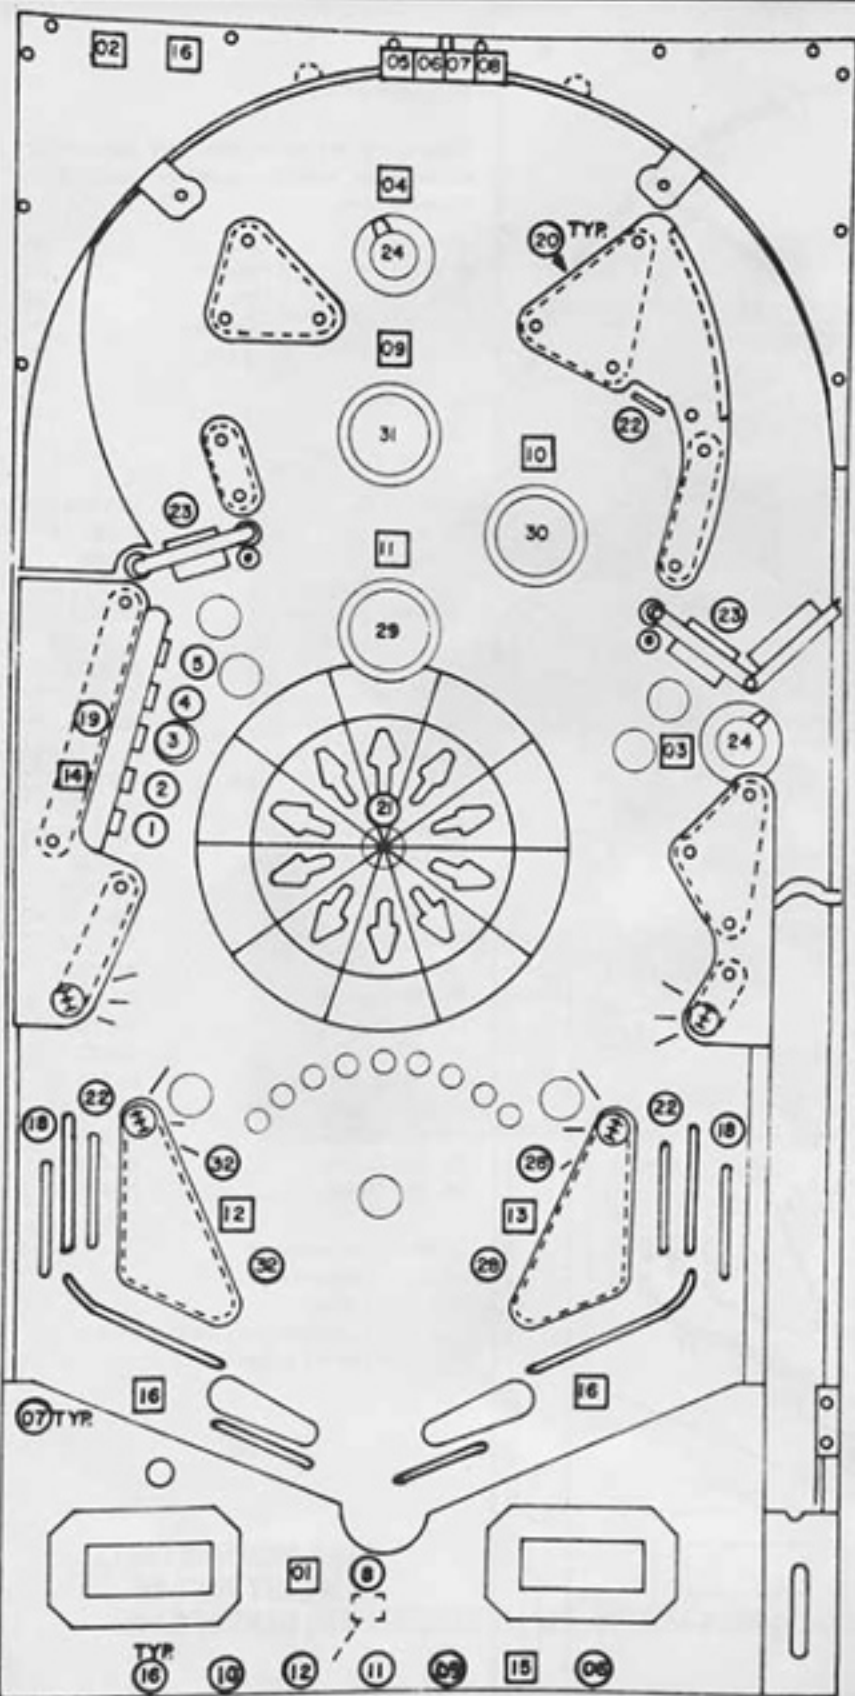

○ INDICATES SWITCH ASSEMBLY IDENTIFICATION NUMBERS.

NOTE: Cabinet: 07
 Door: 06, 09, 10,
 11, 12

□ INDICATES SOLENOID IDENTIFICATION NUMBERS.

NOTE: Cabinet: 06, 07, 08
 Door: 15
 Back Box: 02, 16

WHEN ORDERING PART,
 SPECIFY PART NO.
 AND NAME OF GAME

FREEDOM

SWITCH ASSEMBLIES

1. Drop Target 1	ASW-A1-142	17.	
2. Drop Target 2	ASW-A1-142	18. Left & Right Out Channel	AS-2911-9
3. Drop Target 3	ASW-A1-142	19. Score 100 (GP)*	ASW-A10-51
4. Drop Target 4	ASW-A1-142	20. Score 10 (GP)*	AS-2911-4
5. Drop Target 5	ASW-A1-142	21. Wheel Rollover	AS-2911-10
6. Credit Button	ASW-A10-46	22. Advance Bonus* (& Flipper Lanes)	AS-2911-3
7. Tilt	AS-2911-2	23. Spinner	AS-2911-11
8. Outhole	AS-2911-7	24. Collect Wheel Value Saucers	AS-2911-8
9. Coin III	AS-2744-9	25.	
10. Coin I	AS-2744-9	26.	
11. Coin II (if used)	AS-2744-9	27.	
12.		28. Right Sling Shot	AS-2911-4
13.		29. Bumper #3	AS-2911-1
14.		30. Bumper #2	AS-2911-1
15.		31. Bumper #1	AS-2911-1
16. Slam	ASW-A20-32	32. Left Sling Shot	AS-2911-4

*General purpose or multiple.

SOLENOID ASSEMBLIES

1. Outhole	AN-26-1200	9. #1 Thumper-Bumper (Top)	AN-26-1200
2. Knocker	AN-26-1200	10. #2 Thumper-Bumper	AN-26-1200
3. Saucer (Scores Wheel Value)	AO-26-1200	11. #3 Thumper-Bumper	AN-26-1200
4. Top Hole (Scores Wheel Value)	AO-26-1200	12. Left Sling Shot	AP-26-1200
5. Chime 10	CN-31-2000	13. Right Sling Shot	AP-26-1200
6. Chime 100	CN-31-2000	14. Drop Target Reset	NO-26-2300
7. Chime 1000	CN-31-2000	15. Coin Lock-out	FO-36-7000
8. Extra Chime	CN-31-2000	16. K1 Relay (Flipper Enable)	AQ-25-500/34-5050

WHEN ORDERING PART, SPECIFY PART NO. AND NAME OF GAME