




BACK GLASS
G-408-30

WHEN ORDERING PART, SPECIFY PART NO. AND NAME OF GAME

MATA HARI

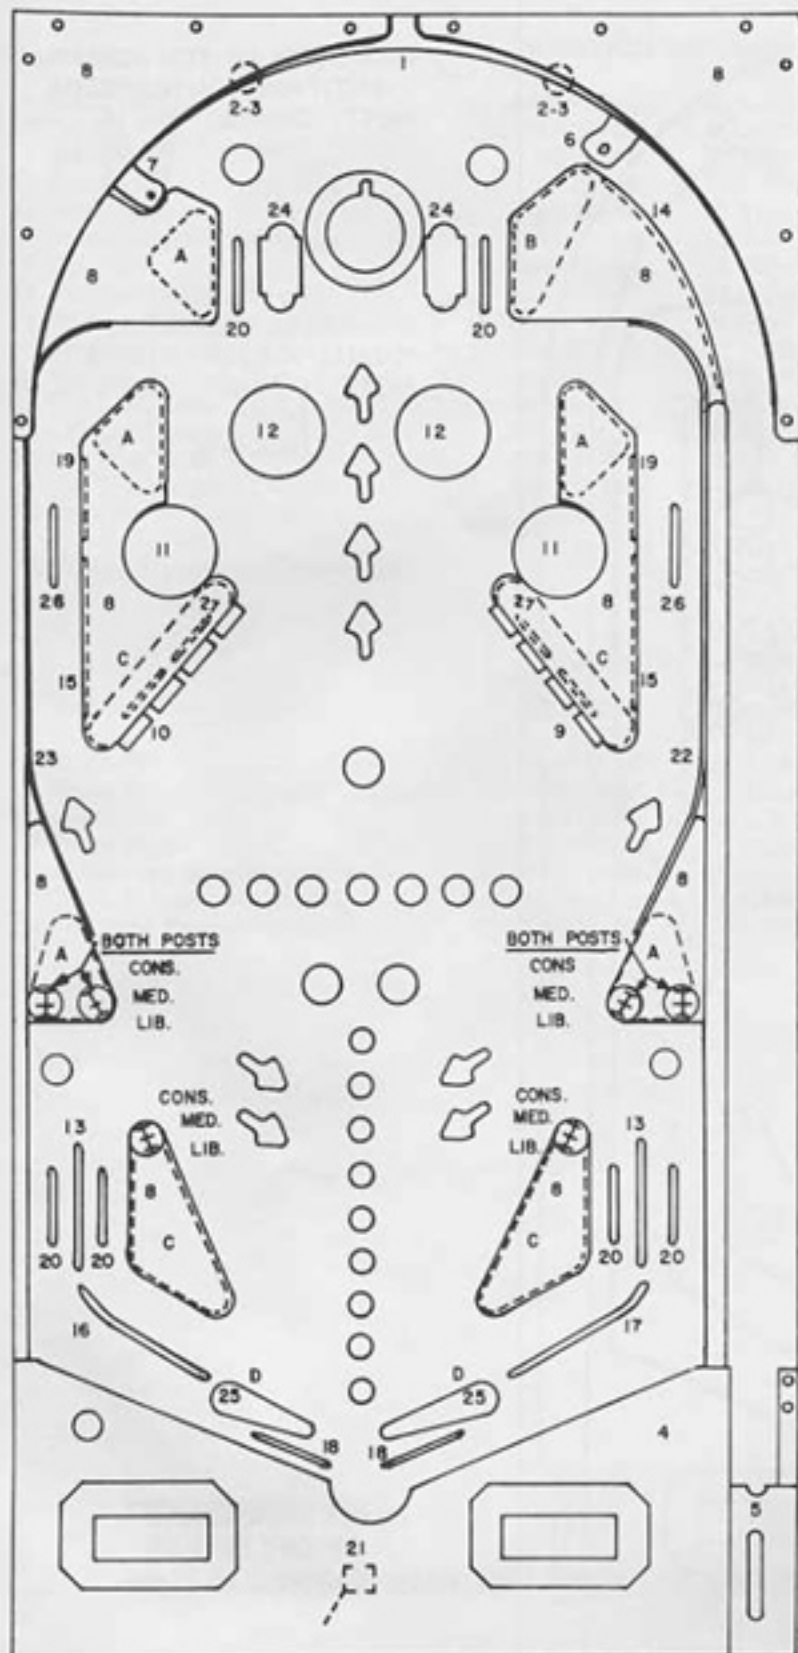

RUBBER PARTS

Dimensions are inside diameters. Numbers in parentheses indicate quantity used, if in excess of one.

A. R-521-2	1-1/2" Dia.	(5)
B. R-521-3	2" Dia.	(5)
C. R-521-4	2-1/2" Dia.	(6)
D. R-406-3	Flipper	(2)
E. R-243	5/16" Dia.	(4)

PANEL TOP PARTS

1. Arch Rail	M-1774
2. Rail Post	C-907
3. Rail Post Cap	C-908
4. Bottom Arch	P-5871-57
5. Shooter Gauge	P-6359-23
6. Ball Gate	A-1475-9
7. Ball Rebound	AS-493-6
8. Screened Plastics	M-1330-141
9. Drop Target Ass'y. (R)	AS-2795-44
10. Drop Target Ass'y. (L)	AS-2795-45
11. Thumper Cap (2)	A-3713-29
12. Thumper Cap (Yel.) (2)	A-3713-35
13. Ball Guide (2)	M-121-18
14. Ball Guide	M-121-25
15. Ball Guide (2)	M-121-30
16. Ball Guide	M-121-43
17. Ball Guide	M-121-44
18. Ball Guide (2)	M-121-53
19. Ball Guide (2)	M-121-65
20. Rollover Wire (6)	AS-2806
21. Outhole Wire	AS-2806-21
22. Guide Rail Ass'y. (R)	A-3032-24
23. Guide Rail Ass'y. (L)	A-3032-25
24. Plastic Guide (2)	C-935-1
25. Flipper & Shaft Ass'y. (2)	AS-2214-24
26. Rollover Wire (2)	AS-2806-24
27. Ball Guide (4)	M-121-32


CONS. - Conservative

MED. - Medium

LIB. - Liberal

Indicates movable posts for scoring adjustments.

**WHEN ORDERING PART,
SPECIFY PART NO.
AND NAME OF GAME**

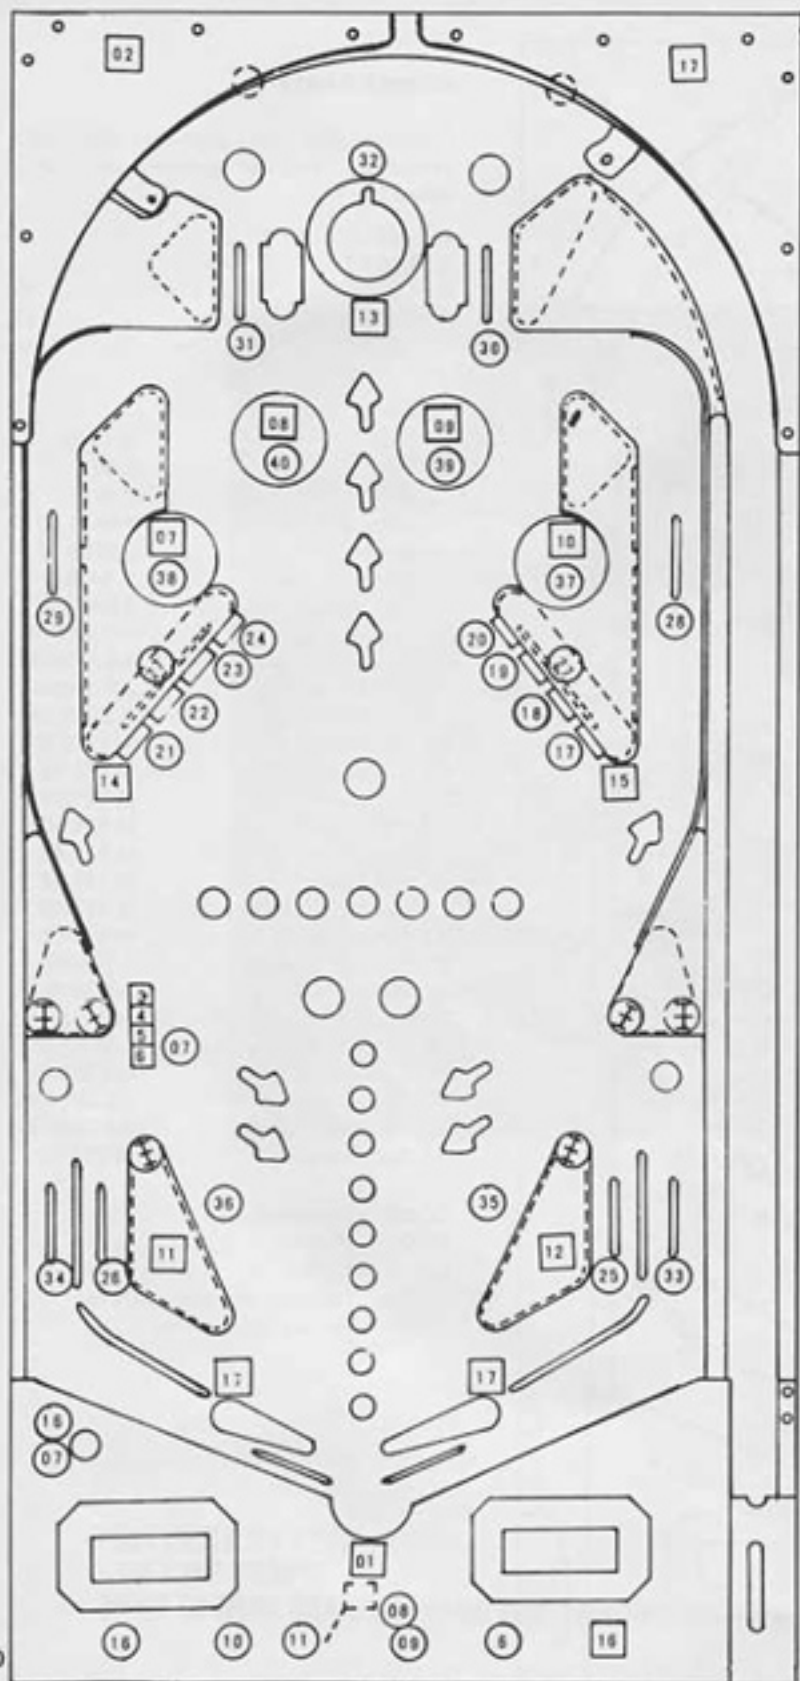

○ INDICATES SWITCH ASSEMBLY IDENTIFICATION NUMBERS.

NOTE: Cabinet: 07, 16
 Door: 06, 09, 10, 11, 16

□ INDICATES SOLENOID IDENTIFICATION NUMBERS.

NOTE: Cabinet: 03, 04, 05, 06
 Door: 16
 Back Box: 02, 17

**WHEN ORDERING PART,
 SPECIFY PART NO.
 AND NAME OF GAME**

MATA HARI

○ SWITCH ASSEMBLIES

6. Credit Button	ASW-A10-46	26. Left Flipper Feeder Lane	AS-2911-9
7. Tilt (3)	AS-2911-2	27. 10 Pt. Drop Target Rebound (2)	AS-2911-12
8. Outhole	AS-2911-7	28. Right "B" Lane	AS-2911-9
9. Coin III (Right)	AS-2744-9	29. Left "A" Lane	AS-2911-9
10. Coin I (Left)	AS-2744-9	30. Top "B" Lane	AS-2911-9
11. Coin II (Middle, if used)	AS-2744-9	31. Top "A" Lane	AS-2911-9
16. Slam (2)	ASW-A20-32	32. Top Saucer	AS-2911-22
17. Rt. Drop Target D (Bottom)	ASE-2911-17	33. Right Outlane	AS-2911-9
18. Rt. Drop Target C	ASE-2911-17	34. Left Outlane	AS-2911-9
19. Rt. Drop Target B	ASE-2911-17	35. Right Slingshot	AS-2911-23
20. Rt. Drop Target A (Top)	ASE-2911-17	36. Left Slingshot	AS-2911-23
21. Left Drop Target D (Bottom)	ASE-2911-17	37. Bottom Right Thumper-Bumper	AS-2911-1
22. Left Drop Target C	ASE-2911-17	38. Bottom Left Thumper-Bumper	AS-2911-1
23. Left Drop Target B	ASE-2911-17	39. Top Right Thumper-Bumper	AS-2911-1
24. Left Drop Target A (Top)	ASE-2911-17	40. Top Left Thumper-Bumper	AS-2911-1
25. Right Flipper Feeder Lane	AS-2911-9		

ASE-2911-4 (3) Switch not shown.

□ SOLENOID ASSEMBLIES

1. Outhole Kicker	AR-26-1200	10. Bottom Right Thumper-Bumper	AN-26-1200
2. Knocker	AR-26-1200	11. Left Slingshot	AN-26-1200
3. Chime 10	CN-31-2000	12. Right Slingshot	AN-26-1200
4. Chime 100	CN-31-2000	13. Top Saucer	AO-27-1300
5. Chime 1000	CN-31-2000	14. Left Drop Target	NO-26-1900
6. Chime 10,000	CN-31-2000	15. Right Drop Target	NO-26-1900
7. Bottom Left Thumper-Bumper	AN-26-1200	16. Coin Lockout Door	FO-36-7000
8. Top Left Thumper-Bumper	AN-26-1200	17. K1 Relay (Flipper Enable)	AQ-25-500/34-5050
9. Top Right Thumper-Bumper	AN-26-1200		