




UPPER BACK GLASS
G-460-1



LOWER BACK GLASS
G-462-1

WHEN ORDERING PART, SPECIFY PART NO. AND NAME OF GAME

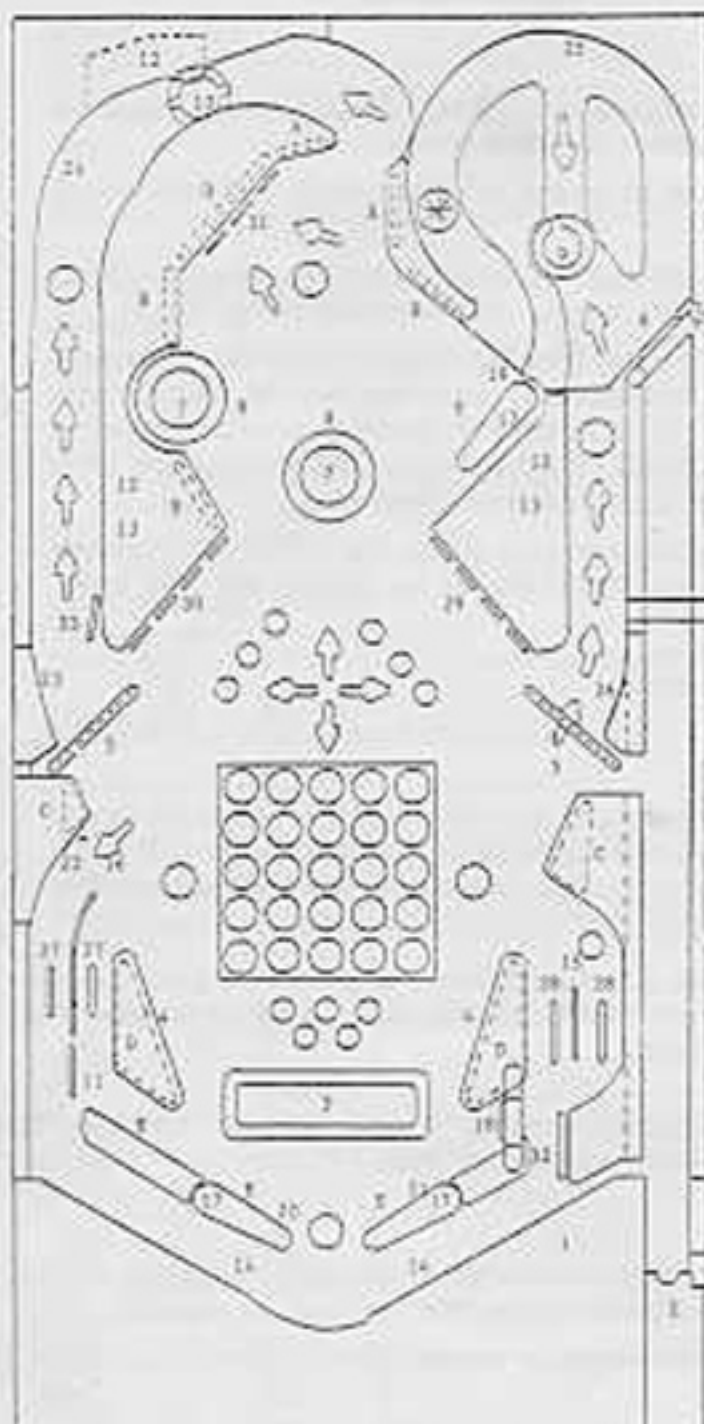

#1283 MR. & MRS. PAC-MAN

RUBBER PARTS

A.	R-521	3/4"	(1)
B.	R-521-1	1"	(4)
C.	R-521-2	1 1/2"	(2)
D.	R-521-3	2"	(3)
E.	R-533-1	FLIPPER	(3)
F.	243	5/16"	(3)
G.	414	POST	(4)

PANEL TOP PARTS


1.	Bottom Arch	P-5871-95
2.	Shooter Gauge	P-6359-57
3.	Read-Out Cover	M-1949-3
4.	Slingshot Assy.	ASE-2593-12 (2)
5.	Ball Gate & Wire Assy.	ASE-2250-111 (2)
6.	Ball Gate & Wire Assy.	ASE-2250-112
7.	Bumper Cap	A-4005-8
8.	Bumper Collar	C-1018-9
9.	Eject Hole Assy.	ASE-428-41
10.	Two-Way Eject Hole	ASE-3054
11.	Relay Gate Assy.	ASE-2308-26
12.	Clear Plastics & Bushings	A-2890-156
13.	Screened Plastics	M-1330-203
14.	Buffer Wire	M-121-53
15.	Guide Wire	M-121-56
16.	Guide Wire	M-121-126
17.	Molded Flipper	A-3994-5 (3)
18.	Ball Gate & Wire Assy.	ASE-2250-90
19.	Flipper Assembly (R)	ASE-1587-130
20.	Flipper Assembly (L)	ASE-1587-131
21.	Flipper Assembly (R)	ASE-1587-135
22.	Ball Guide	A-3032-111
23.	Ball Guide	A-3032-113
24.	Ball Guide	A-3032-114
25.	Ball Guide	A-3032-115
26.	Ball Guide	A-3032-112
27.	Wire Actuator	ASE-2805-9 (2)
28.	Wire Actuator	ASE-2805-10 (2)
29.	D/T & Memory Assy.	ASE-3038-8
30.	D/T & Memory Assy.	ASE-3038-9
31.	Drop Target Assy.	ASE-2795-98
32.	Guide Wire	M-121-90
33.	Guide Wire	M-121-32

**GAME #1283 PAC-MAN
SOLENOID IDENTIFICATION TABLE**

Self Test #	SOLENOID IDENTIFICATION	Self TEST #	SOLENOID IDENTIFICATION
01	TOP LEFT SAUCER (KICK TO LEFT)	12	TOP 3 DROP TARGET RESET
02	TOP LEFT SAUCER (KICK TO RIGHT)	13	LEFT 4 DROP TARGET #1 (BOTTOM)
03	RIGHT SAUCER	14	LEFT 4 DROP TARGET #2
04	KNOCKER	15	LEFT 4 DROP TARGET #3
05	OUTHOLE	16	LEFT 4 DROP TARGET #4 (TOP)
06	LEFT THUMPER BUMPER	17	RIGHT 4 DROP TARGET #1 (TOP)
07	CENTER THUMPER BUMPER	18	RIGHT 4 DROP TARGET #2
08	LEFT SLINGSHOT	19	RIGHT 4 DROP TARGET #3
09	RIGHT SLINGSHOT	20	RIGHT 4 DROP TARGET #4 (BOTTOM)
10	LEFT 4 DROP TARGET RESET	21	GATE
11	RIGHT 4 DROP TARGET RESET	22	COIN LOCKOUT DOOR
		23	K1 RELAY (FLIPPER ENABLE)

SWITCH ASSEMBLY SELF-TEST DISPLAY NUMBERS

Switch Self Test #	DESCRIPTION	Switch Self Test #	DESCRIPTION
01	LEFT 4 DROP TARGET 1 (BOTTOM)	21	RIGHT SAUCER ROLLOVER BUTTON
02	LEFT 4 DROP TARGET 2	22	TOP 3 DROP TARGET 1 (BOTTOM)
03	LEFT 4 DROP TARGET 3	23	TOP 3 DROP TARGET 2
04	LEFT 4 DROP TARGET 4 (TOP)	24	TOP 3 DROP TARGET 3 (TOP)
05	OUTHOLE KICKER	25	RIGHT 4 DROP TARGET 1 (TOP)
06	CREDIT BUTTON	26	RIGHT 4 DROP TARGET 2
07	TOP LEFT SAUCER	27	RIGHT 4 DROP TARGET 3
08	RIGHT SAUCER	28	RIGHT 4 DROP TARGET 4 (BOTTOM)
09	COIN III (RIGHT)	29	30 POINT REBOUND (2)
10	COIN I (LEFT)	30	LEFT & RIGHT WIRE SPINNER
11	COIN II (MIDDLE)	31	
12	LEFT RETURN & RIGHT OUTLANE	32	
13	RIGHT RETURN LANE	33	LEFT FLIPPER CABINET BUTTON
14	LEFT OUTLANE	34	"M" BACK TARGET
15	TILT (3)	35	"A" BACK TARGET
16	SLAM (2)	36	"N" BACK TARGET
17	LEFT THUMPER BUMPER	37	RIGHT FLIPPER CABINET BUTTON
18	CENTER THUMPER BUMPER	38	"P" BACK TARGET
19	LEFT SLINGSHOT	39	"A" BACK TARGET
20	RIGHT SLINGSHOT	40	"C" BACK TARGET

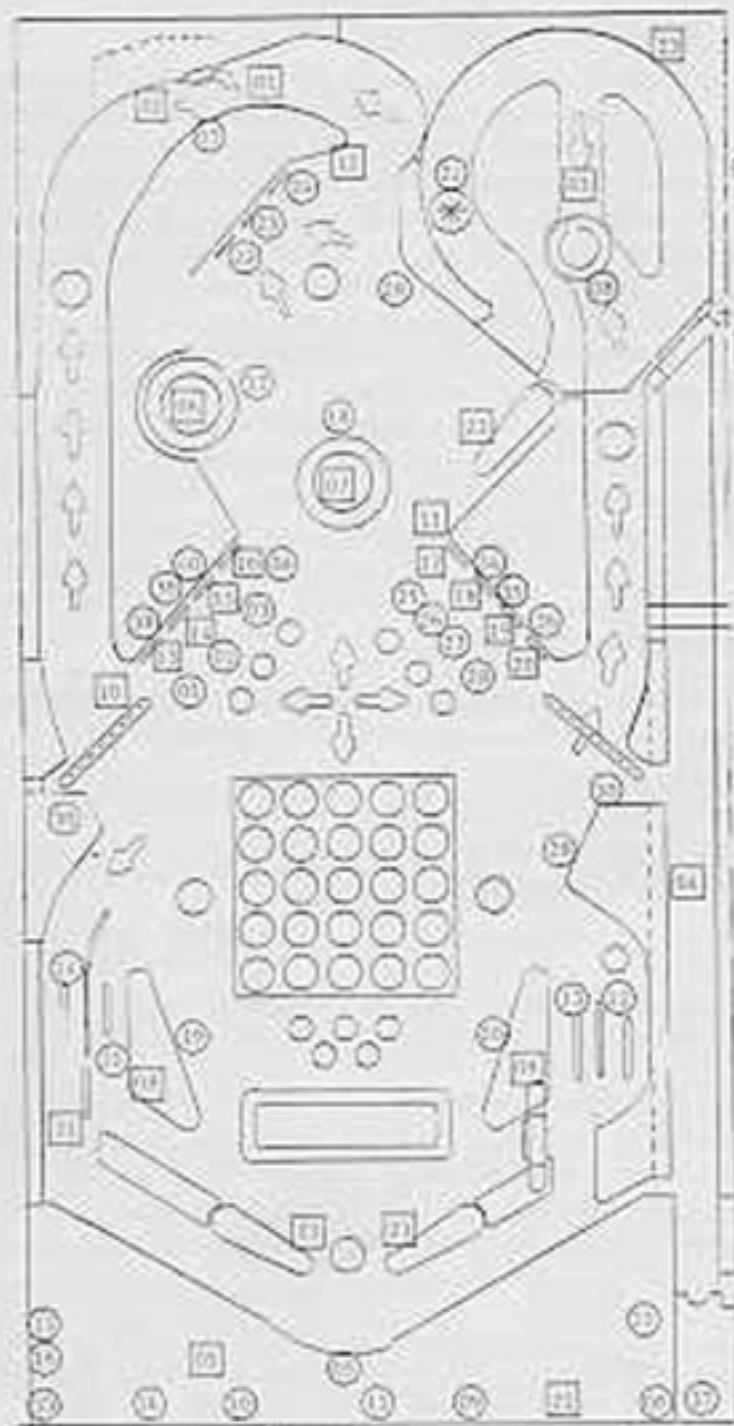

41283 PAC-548
 EISENHOWER BUILDING ASSEMBLY
 IDENTIFICATION NUMBERS
 WITTS: 04,05,15,16,33,37
 DOORS: 06,09
 10,11,34

INDICATED SOLIDIFIED
 IDENTIFICATION NUMBERS
 NOTE: DOOR: 27
 BACKBOX: 23
 CABINET: 35

FIGURE 5

10