




BACK GLASS
GT-408-34

WHEN ORDERING PART, SPECIFY PART NO. AND NAME OF GAME

PLAYBOY

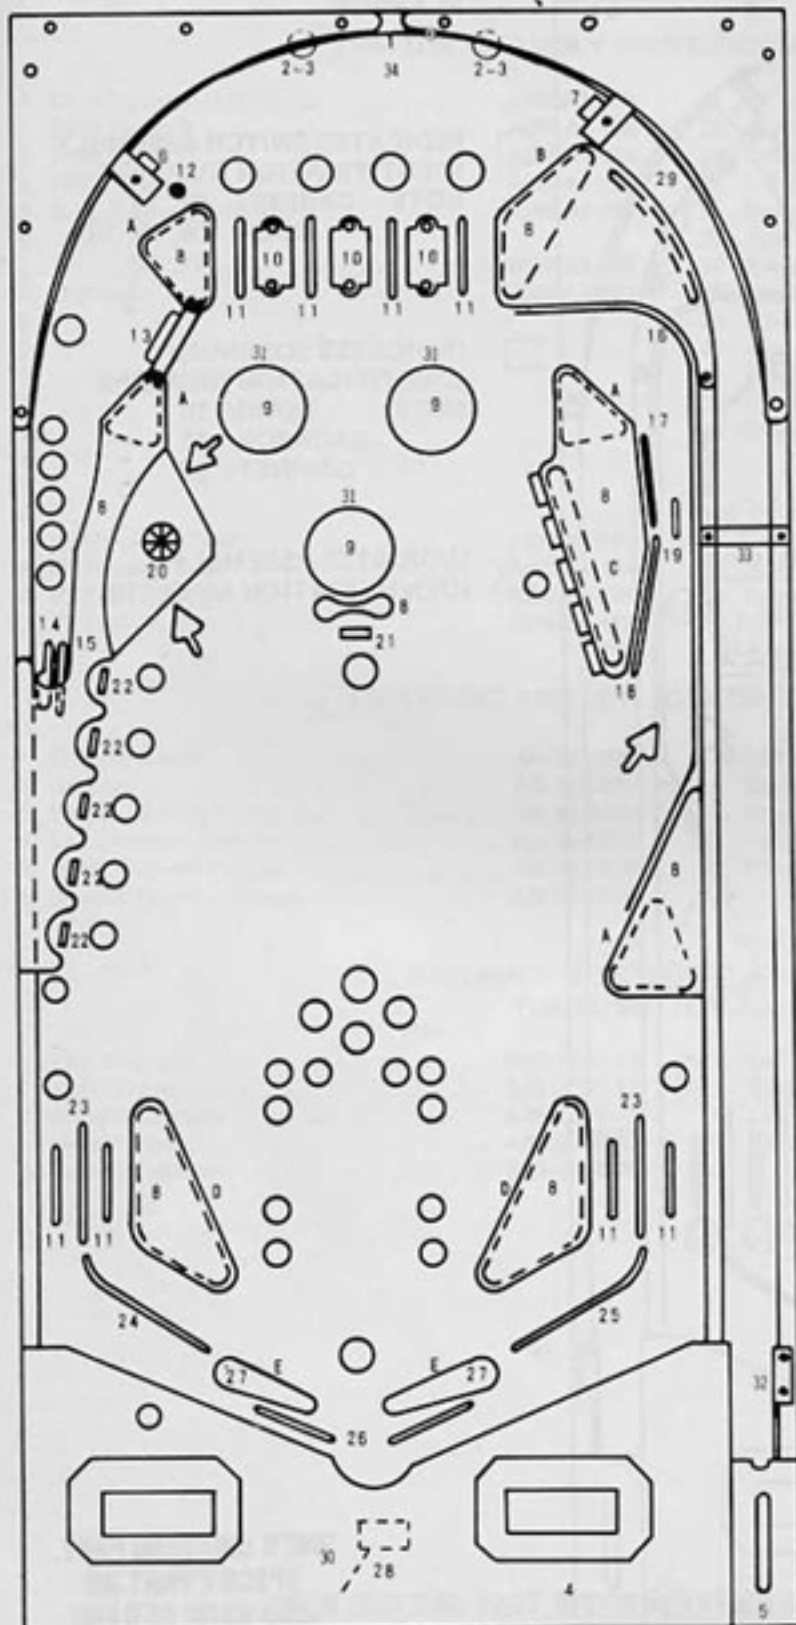

RUBBER PARTS

Dimensions are inside diameters. Numbers in parentheses indicate quantity used, if in excess of one.

A. R521-2	1-1/2" Dia.	(4)
B. R-521-3	2" Dia.	(1)
C. R-521-5	3" Dia.	(2)
D. R-521-4	2-1/2" Dia.	(2)
E. R-406-3	Flipper	(2)
F. R-243	5/16" Dia.	(15)

PANEL TOP PARTS

1. Arch Rail	M-1774
2. Rail Post (2)	C-907
3. Rail Post Cap (2)	C-908
4. Bottom Arch	P-5871-62
5. Shooter Gauge	P-6359-28
6. Ball Gate (L)	A-1475-12
7. Ball Gate (R)	A-1475-13
8. Screened Plastics (set)	A-2890-129
9. Thumper Cap (3)	A-3713-42
10. Plastic Guides (3)	C-935-5
11. R.O. Wire & Brk't (8)	ASE-2806
12. Minipost & Rubber	ASE-2836-1
13. Ball Gate Assembly	ASE-2250-25
14. R.O. Wire & Bracket	ASE-2806-25
15. Ball Guide	M-121-24
16. Guide Rail Assembly	A-3032-24
17. Ball Guide	M-121-65
18. Ball Guide	M-121-30
19. R.O. Wire & Bracket	ASE-2806-24
20. R.O. Button	C-900
21. Target Assy. (Red)	ASE-2911-3
22. Target Assy. (White) (5)	ASE-2911-20
23. Ball Guide (2)	M-121-18
24. Ball Guide	M-121-43
25. Ball Guide	M-121-44
26. Buffer Wire (2)	M-121-53
27. Flipper & Shaft (2)	ASE-2214-24
28. Outhole Wire Assembly	ASE-2806-21
29. Ball Guide	M-121-25
30. Outhole Kicker	ASE-2694-3
31. Thumper Body (3)	ASE-2222-4
32. Protective Angle	P-7639
33. Hood	P-1732
34. Panel	CA-1128-164

**WHEN ORDERING PART,
SPECIFY PART NO.
AND NAME OF GAME**

PLAYBOY


○ INDICATES SWITCH ASSEMBLY IDENTIFICATION NUMBERS.

NOTE: CABINET: 07, 16
DOOR: 06, 09, 10,
11, 16

□ INDICATES SOLENOID IDENTIFICATION NUMBERS.

NOTE: DOOR: 10
BACKBOX: 11
CABINET: 02

△ INDICATES ASSEMBLY IDENTIFICATION NUMBERS

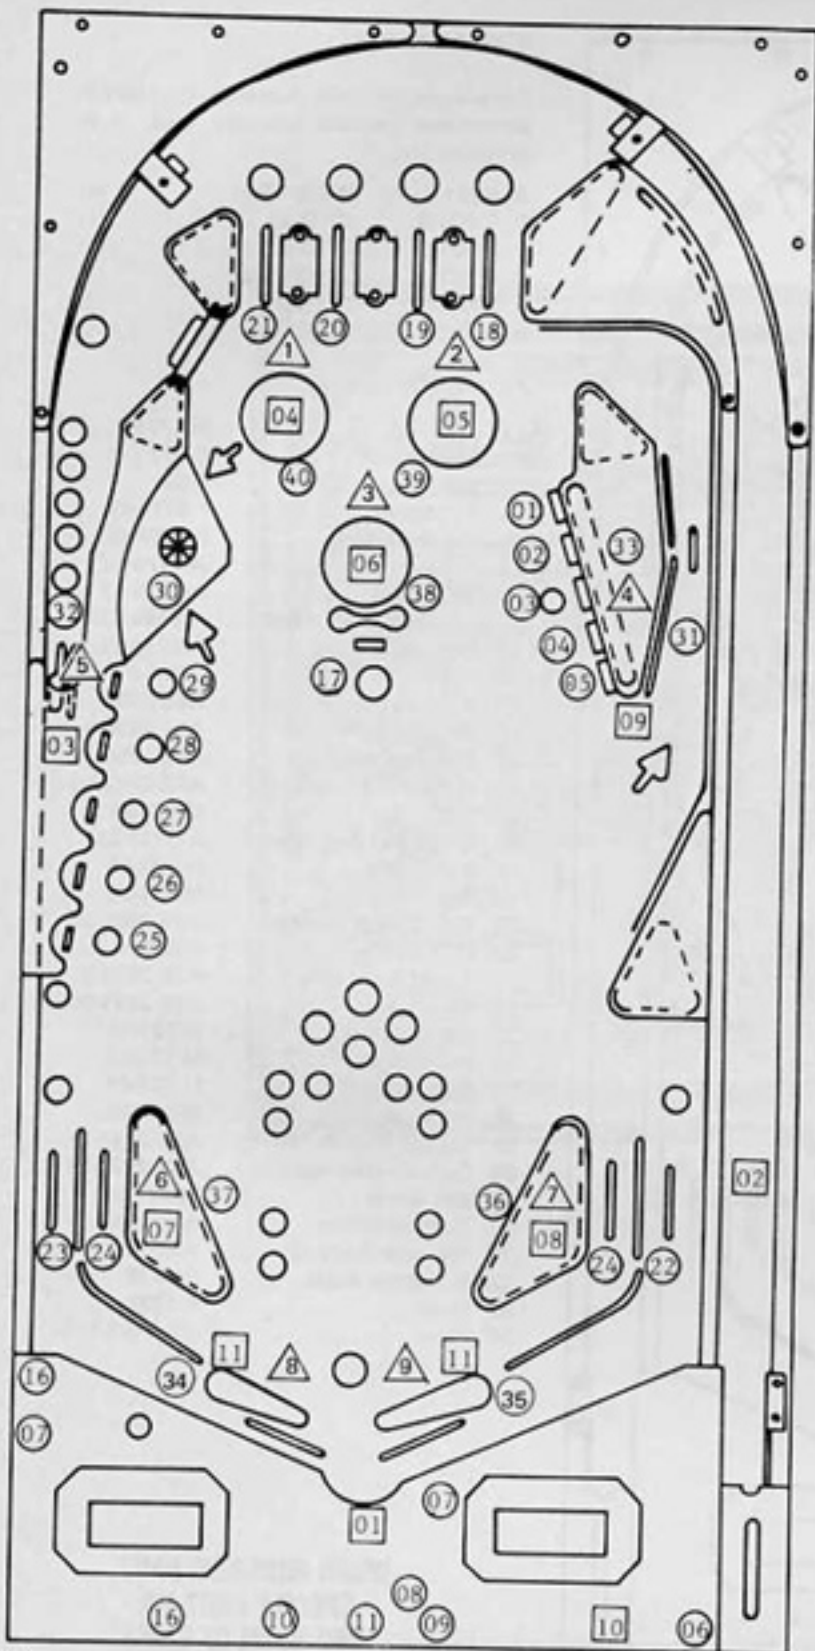

WHEN ORDERING PART,
SPECIFY PART NO.
AND NAME OF GAME

PLAYBOY

○ SWITCH ASSEMBLY IDENTIFICATION NUMBERS

1. Drop Target A (Top)	ASW-A1-168	21. #1 Top Key R.O.	ASW-A1-155
2. Drop Target B	ASW-A1-168	22. Right Outlane	ASW-A1-155
3. Drop Target C	ASW-A1-168	23. Left Outlane	ASW-A1-155
4. Drop Target D	ASW-A1-168	24. L & R Flipper Feeder Lane	ASW-A1-155
5. Drop Target (E) (Bottom)	ASW-A1-168	25. September Target	ASW-A10-48
6.		26. July Target	ASW-A10-48
7. Tilt	ASW-A1-145	27. January Target	ASW-A10-48
8. Outhole	ASW-A1-143	28. May Target	ASW-A10-48
9.		29. March Target	ASW-A10-48
10.		30. Arrow R.O. Button	ASW-A1-162
11.		31. Right Lane R.O.	ASW-A1-155
12.		32. Playboy Grotto R.O.	ASW-A1-155
13.		33. Drop Target Rebound	ASW-A10-51
14.		34.	
15.		35.	
16.		36. Right Slingshot	ASW-A10-47
17. #5 Key—Red Target	ASW-A10-48	37. Left Slingshot	ASW-A10-47
18. #4 Top Key R.O.	ASW-A1-155	38. Bottom Thumper Bumper	ASW-A110-5
19. #3 Top Key R.O.	ASW-A1-155	39. Right Thumper Bumper	ASW-A110-5
20. #2 Top Key R.O.	ASW-A1-155	40. Left Thumper Bumper	ASW-A110-5

□ SOLENOID AND COIL IDENTIFICATION NUMBERS

1. Outhole Kicker	AN-26-1200	7. Left Slingshot	AN-26-1200
2. Knocker	AN-26-1200	8. Right Slingshot	AN-26-1200
3. Playboy Grotto Kicker	AN-26-1200	9. Drop Target	NO-24-1400
4. Left Thumper Bumper	AN-26-1200	10. Coin Lockout Door	FO-36-7000
5. Right Thumper Bumper	AN-26-1200	11. Flippers	AQ-25-500/34-4500
6. Bottom Thumper Bumper	AN-26-1200		

△ ASSEMBLY IDENTIFICATION NUMBERS PANEL BOTTOM PARTS

1. Left Thumper	ASE-1567-13	6. Left Slingshot	ASE-2593-4
2. Right Thumper	ASE-1567-13	7. Right Slingshot	ASE-2593-4
3. Bottom Thumper	ASE-1567-13	8. Left Flipper	ASE-1587-101
4. Drop Target	ASE-2795-58	9. Right Flipper	ASE-1587-102
5. Grotto Kickback	ASE-1566-26		

For assembly breakdown, see back of book.